

4. Speedometer

A: SPECIFICATION

Since the meter panel assembly cannot be disassembled, do not remove or inspect the speedometer alone. (Do not remove the cover on the back surface.)